



Clock Radio

Let's make things better

PHILIPS

AJ 3000 family - Clock radio

English

Português

Dansk

Svenska

Suomi


Ελληνικά

Meet Philips at the Internet
http://www.philips.com

3140 115 2567 1

Printed in Hong Kong

TC text/RR/9843

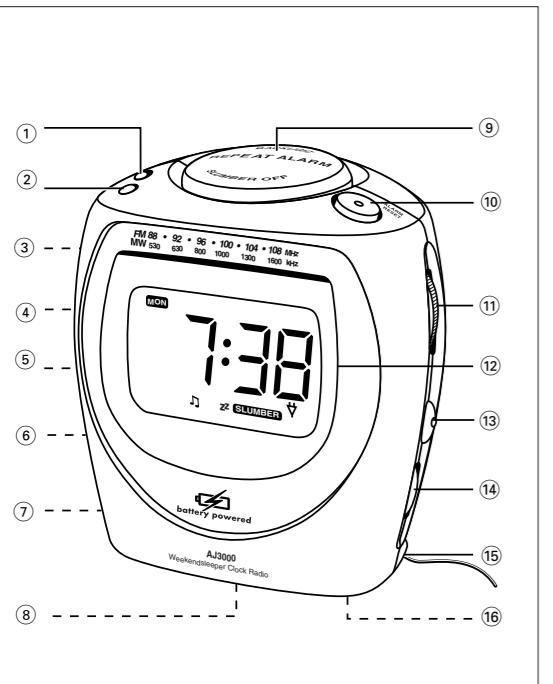

USING THE ALARM

General

You can set your alarm by radio, buzzer or both.

- The buzzer is at a fixed volume and cannot be adjusted.
- The power-saving-buzzer automatically replaces the radio alarm if battery supply is low.

Setting the alarm by radio or buzzer

1 Press ALARM/TIME/DAY SET once or more until the display shows SET ALARM and the radio Δ or buzzer \square symbol flashes.2 Press UP Δ or DOWN \square to set and adjust both the hours and minutes:

- With your finger held down on UP Δ or DOWN \square respectively, the time will increase/decrease rapidly and continuously from hours to minutes.
- If necessary, press UP Δ or DOWN \square briefly and repeatedly to adjust the time slowly, minute by minute.

3 Release UP Δ or DOWN \square when you have reached the correct setting.

→ SET TIME goes out after 5 seconds and the clock time is set.

Display backlight

The use of the backlight depends on whether the set is battery or adapter operated.

1 Press REPEAT ALARM once to activate the backlight.

→ The backlight goes out after 2 seconds if the set is battery operated.

2 Press REPEAT ALARM again if you want to:

- Re-activate the backlight if the set is battery operated.
- Switch off the backlight if adapter operated.

NOTE: During an alarm call, the REPEAT ALARM will only operate for the repeat alarm function.

4 Adjust the sound using VOLUME.

5 Press RADIO ON/OFF to switch off the radio.

→ The display shows OFF briefly.

To review the alarm

1 Press ALARM/TIME/DAY once or more until the display shows SET ALARM and Δ or \square .

→ The display reverts to the clock display after 5 seconds.

IMPORTANT! If you want the radio alarm to wake you up, FIRST CHECK if you have turned to a station and adjusted the volume loud enough.

SWITCHING OFF THE ALARM

There are three ways of switching off the alarm. Unless you cancel the alarm completely, the 24-hour ALARM RESET will be automatically selected after 30 minutes, from the time your alarm first goes off.

24-hour alarm reset

If you want the alarm mode to be stopped immediately but also wish to retain the same alarm setting for the following day:

SLUMBER

This set has a built-in timer which enables the set to be automatically switched off during radio playback after a set period of time. There are three slumber times before the set turns itself off: 10, 20 and 30 minutes, off, 10, 20, 30, 60 and 120 minutes.

Setting the Slumber

1 When the radio is on or, select your slumber time by pressing the SLUMBER button once or more until the desired slumber time is shown e.g. SL20.

→ SLUMBER appears when slumber is active.

2 To cancel the slumber function either:

- Press SLUMBER once or more until the radio is switched off.
- Press REPEAT ALARM.

MAINTENANCE

- Do not expose the set or batteries to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- To clean the set use a damp chamois leather. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.


ENVIRONMENTAL INFORMATION

- All unnecessary packaging material has been omitted to make the packaging easy to separate into two materials: cardboard (box) and polyethylene bags, protective foam.
- Your set consists of materials which can be recycled if disassembled by a specialized company.
- Please observe local regulations on the disposal of packing materials, exhausted batteries and old equipment.

Troubleshooting

If a fault occurs, first check the points listed below before taking the set for repair. If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

WARNING: Under no circumstances should you try to repair the set yourself, as this will invalidate the guarantee.

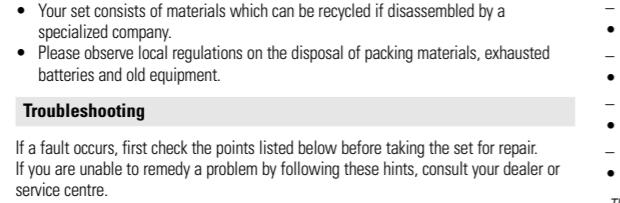

English

FUNCTIONAL OVERVIEW

1 SLUMBER - to play the radio for a preset period of time

2 RADIO ON/OFF - to switch on/off radio

3 ALARM MODE/OFF - to switch on/off alarm(s) by buzzer, radio or both

4 WEEKENDSLEEPER Z² MODE-OFF - to switch off the alarm function during the weekend

5 ALARM/TIME/DAY SET

- to set time for the timer alarm;
- to set time for the radio alarm;
- to set clock time;
- to set the day.

6 UP Δ DOWN \square

- to adjust both the hours and minutes for clock/alarm times;
- to select the day of the week;
- to select the alarm mode
- to select the alarmwaking sleep mode

7 Socket for AC/DC 7.5V adapter

8 Battery compartment

9 REPEAT ALARM

- to switch off the alarm for a 5 minute period
- to switch display on/off
- to switch off slumber

10 24-hour ALARM RESET - to automatically reset the alarm for the same time next day

11 TUNING - to tune to radio stations

12 Display - to show the clock/alarm times and status of the set

13 BAND - to select FM/MW (LV) waveband

14 VOLUME - to adjust the sound level

15 Pigtail - aerial for FM reception

16 RESET - to reset the clock data

NOTE: To avoid damage to the set, only use the adapter supplied!

SELF-POWERED BACK-UP

The self-powered back-up conveniently allows your day, alarm and clock time settings to be stored for up to 3 minutes when there is a power interruption e.g. AC power failure or when changing batteries.

The complete radio clock and backlight illumination will be switched off. As soon as the power supply returns, the display will indicate the correct time.

- If the power supply returns after 3 minutes, the demo mode appears and you will need to re-enter all clock settings.

GENERAL FEATURES

Reset

Should you receive external interference e.g. static electricity from carpets, thunderstorms, etc. which affects the display and electronic functions of your set, RESET allows you to clear all previous settings and start up again.

• Use a ballpoint pen to press RESET, found on the bottom of the set.

Demo mode

When the set is first connected to a power supply or has been reset, 'PHILIPS' will scroll continuously across the demonstration display until the time and day settings are entered. In Demo mode only the ALARM/TIME/DAY SET control will function.

Display backlight

The use of the backlight depends on whether the set is battery or adapter operated.

1 Press REPEAT ALARM once to activate the backlight.

→ The backlight goes out after 2 seconds if the set is battery operated.

2 Press REPEAT ALARM again if you want to:

- Re-activate the backlight if the set is battery operated.
- Switch off the backlight if adapter operated.

NOTE: During an alarm call, the REPEAT ALARM will only operate for the repeat alarm function.

3 Release UP Δ or DOWN \square when you have reached the correct setting.

→ SET TIME goes out after 5 seconds and the clock time is set.

PROGRAMMING

The use of the programming depends on whether the set is battery or adapter operated.

1 Press ALARM/TIME/DAY SET once or more until the display shows SET ALARM.

→ The display remains on for 5 seconds.

2 Press UP Δ or DOWN \square to set and adjust both the hours and minutes:

- With your finger held down on UP Δ or DOWN \square respectively, the time will increase/decrease rapidly and continuously from hours to minutes.
- If necessary, press UP Δ or DOWN \square briefly and repeatedly to adjust the time slowly, minute by minute.

3 Release UP Δ or DOWN \square when you have reached the correct setting.

→ SET TIME goes out after 5 seconds and the clock time is set.

DISPLAY BACKLIGHT

The use of the display backlight depends on whether the set is battery or adapter operated.

1 Press REPEAT ALARM once to activate the display backlight.

→ The display remains on for 5 seconds.

2 Press REPEAT ALARM again if you want to:

- Re-activate the display if the set is battery operated.
- Switch off the display if adapter operated.

NOTE: During an alarm call, the REPEAT ALARM will only operate for the repeat alarm function.

3 Release UP Δ or DOWN \square when you have reached the correct setting.

→ SET TIME goes out after 5 seconds and the clock time is set.

RESETTING

The use of the reset depends on whether the set is battery or adapter operated.

1 Press ALARM/TIME/DAY SET once or more until the display shows SET ALARM.

→ The display remains on for 5 seconds.

2 Press UP Δ or DOWN \square to set and adjust both the hours and minutes:

- With your finger held down on UP Δ or DOWN \square respectively, the time will increase/decrease rapidly and continuously from hours to minutes.
- If necessary, press UP Δ or DOWN \square briefly and repeatedly to adjust the time slowly, minute by minute.

3 Release UP Δ or DOWN \square when you have reached the correct setting.

→ SET TIME goes out after 5 seconds and the clock time is set.

CLOCK DISPLAY

The use of the clock display depends on whether the set is battery or adapter operated.

1 Press ALARM/TIME/DAY SET once or more until the display shows SET ALARM.

→ The display remains on for 5 seconds.

2 Press UP Δ or DOWN \square to set and adjust both the hours and minutes:

- With your finger held down on UP Δ or DOWN \square respectively, the time will increase/decrease rapidly and continuously from hours to minutes.
- If necessary, press UP Δ or DOWN \square briefly and repeatedly to adjust the time slowly, minute by minute.

3 Release UP Δ or DOWN \square when you have reached the correct setting.

→ SET TIME goes out after 5 seconds and the clock time is set.

ALARMS

The use of the alarms depends on whether the set is battery or adapter operated.

1 Press ALARM/TIME/DAY SET once or more until the display shows SET ALARM.

→ The display remains on for 5 seconds.

2 Press UP Δ or DOWN \square to set and adjust both the hours and minutes:

- With your finger held down on UP Δ or DOWN \square respectively, the time will increase/decrease rapidly and continuously from hours to minutes.
- If necessary, press UP Δ or DOWN \square briefly and repeatedly to adjust the time slowly, minute by minute.

3 Release UP Δ or DOWN \square when you have reached the correct setting.

→ SET TIME goes out after 5 seconds and the clock time is set.

BATTERIES

The use of the batteries depends on whether the set is battery or adapter operated.

1 Press ALARM/TIME/DAY SET once or more until the display shows SET ALARM.

→ The display remains on for 5 seconds.

2 Press UP Δ or DOWN \square to set and adjust both the hours and minutes:

- With your finger held down on UP Δ or DOWN \square respectively, the time will increase/decrease rapidly and continuously from hours to minutes.
- If necessary, press UP Δ or DOWN \square briefly and repeatedly to adjust the time slowly, minute by minute.

3 Release UP Δ or DOWN \square when you have reached the correct setting.

→ SET TIME goes out after 5 seconds and the clock time is set.

RECHARGEABLE BATTERIES

The use of the rechargeable batteries depends on whether the set is battery or adapter operated.

1 Press ALARM/TIME/DAY SET once or more until the display shows SET ALARM.

→ The display remains on for 5 seconds.

2 Press UP Δ or DOWN \square to set and adjust both the hours and minutes:

- With your finger held down on UP Δ or DOWN \square respectively, the time will increase/decrease rapidly and continuously from hours to minutes.
- If necessary, press UP Δ or DOWN \square briefly and repeatedly to adjust the time slowly, minute by minute.

3 Release UP Δ or DOWN \square when you have reached the correct setting.

→ SET TIME goes out after 5 seconds and the clock

FUNKTIONSSÖVRSIKT

- SLUMBER** - insomningsläge, då radion slår sig efter en bestämd tid
RADIO ON/OFF - för att koppla på/radion
ALARM MODE/OFF - för att koppla på/väckning med signal, radio eller båda
WEEKENDSLEEPER Z MODE/OFF - för att ställa in sovomrorg under veckoslutet
ALARM/TIME/DAY SET
 - för att ställa in tiden för väckning med signal
 - för att ställa in tiden för väckning med radio
 - för att ställa klockan
 - för att ställa in veckodag**UP ↑ DOWN ↓**
 - för att ändra bärar tiden och minuterna för klockan/väckning
 - för att välja veckodag
 - för att välja väckningsläge
 - för att välja dagar för sovomrorg**Utag för nätadapter AC/DC 7.5 V**
Batterifack
REPEAT ALARM
 - för att koppla av väckningen i 5 minuter
 - för att koppla på/av teckennutans bakkelysning
 - för att stänga av insomningsläge**ALARM RESET** - för att automatiskt ställa in väckning för samma tid nästa dygn
TUNING - för att ställa in radiostationer
Teckennuta - för att visa klockan/väckningstiden och radions status
BAND - för att välja vägländsband - FM/MW
VOLUME - för att ställa in ljudnivån
Trådantenn - antenn för FM-mottagning
RESET - för att ställa om klockuppsättning

UPPBACKNING MED EGEN ENERGIKÄLLA

Tack vare uppbackningsfunktionen lagras inställningarna för veckodag, väckning och klocka i upp till 3 minuter när radion inte är frånströmt t.ex. vid strömavbrott eller när du byter batterier.

Beta klockradion och teckennutans bakkelysning stårngas av. Så snart som strömmen kommer tillbaka sätts det tillbaka.

• Om det tar mer än 3 minuter för strömmen att komma tillbaka, visas demonstrationsläget, och du måste göra om dina klockinställningar.

ALLMÄNA EGENSKAPER

Nollställning
Om du får problem med störningar utifrån t.ex. statisk elektricitet från märtor, åska etc som påverkar teckennutan och elektroniken i radion, kan du radera de tidigare inställningarna med RESET och börja från början igen.

• Använd en kulpetspenna för att trycka på RESET på radions undersida.

Demonstrationsläge

När du ansluter radion till en strömkälla för första gången eller om du har nollställt inställningarna, rullar PHILIPS kontinuerligt över teckennutans till klockan har ställts och veckodag har ställts in. I demonstrationsläge fungerar bara regletet ALARM/TIME/DAY SET.

Teckennutans bakkelysning

Användningen av bakkelysningen är olika om radion går på batterier eller på adapter.

1 Tryck en gång på REPEAT ALARM för att aktivera bakkelysningen.
→ Om radion går på batterier släcker bakkelysningen efter 2 sekunder.
2 Tryck på REPEAT ALARM igen om du vill:

- aktivera bakkelysningen, när radion går på batterier.
- slänga av bakkelysningen, om den går på adapter.

OBIS: Under väckning fungerar bara REPEAT ALARM för uppdrag väckning.

HUR DU ANVÄNDER VÄCKNING

Allmänt
Du kan ställa in väckningen så den sker med radio, signal eller båda.

• Signalens ljuddyrka är fast och kan inte ändras.
• Den energisänkta signalen ersätter automatisk väckning med radio om batterierna börjar ta slut.

Ställa in väckning med radio eller signal

1 Tryck en eller flera gånger på ALARM/TIME/DAY SET tills teckennutan visar SET ALARM och symbolen för radio/batteri för signal D blinkar.

2 Tryck på UP ↑ eller DOWN ↓ under 5 sekunder i och åtta minuter och minuterna.

- Om du håller ner UP ↑ eller DOWN ↓ med fingret ökar respektive minskar tidsanvisningen snabbt och kontinuerligt från minut till timmar.

- Om så behövs kan du sedan trycka uppdraget gånger helt kort på UP ↑ eller DOWN ↓ för att få siffrorna att ändras långsamt, minut för minut.

3 Släpp upp UP ↑ eller DOWN ↓ när du har kommit till rätt inställning.

→ SET TIME släcks efter 5 sekunder, och då är klockan ställd.

RADIO

Du kan använda enbart radiofunktionen om du vill.

1 Tryck på RADIO ON/OFF för att koppla på radion.

2 Byt vid behov vägländsbandet med BAND.

3 Använd TUNING för att hitta önskad station.

För att förbättra mottagningen:

FM: Dra ut dränten baktilt på radion för bäst mottagning.

AM (MW): För detta vägländsband finns en inbyggd antenn. Du riktar antennen genom att vraka på hela radion.

4 Justera justet med VOLUME.

5 Tryck på RADIO ON/OFF för att koppla av radion.

→ Teckennutan visar OFF helt kort.

INSOMNING

Radion har en inbyggd timer som du kan använda för att automatiskt slänga av radioen efter en viss tid. Du kan välja mellan tre tidsrynter innan radion slänger sig: 10, 20 och 30 minuter, av 10...

Ställa in insomning

1 Radion kan vara på eller av. Välj insomningsläge genom att trycka en eller flera gånger på SLUMBER tills önskad tidsrymd visas, t.ex. SL20. → SLUMBER visas när insomningsfunktionen är aktiv.

2 För att avbryta insomningsfunktionen gör du något av följande:

- Tryck en eller flera gånger på SLUMBER tills radion är avstängd.

- Tryck på REPEAT ALARM.

UNDERRÄTTELSE

• Utsätt inte radion eller batterierna för fukt, regn, sand eller för stark värme eller värmeelementer eller direkt solljus.

• Gör radion med ett fuktigt samskskin. Använd inga rengöringsmedel som innehåller alkohol, ammoniak, bensin eller skurmedel som kan skada häljet.

MILJÖINFORMATION

• Alt onödig förpackningsmaterial har utslets för att göra det enkelt att kassera i två kategorier: papp (box) och polyceten (påsar, skumplast).

• Radion bestar av material som kan återvinnas om det placeras isär av ett företag som specialiserar sig på det.

• Räcka dig efter din kommunens rekommendationer om kassering av förpackningsmaterial, utgående batterier och gammal utrustning.

Felsökning

Om det uppstår ett fel ber vi dig att först kontrollera nedanstående innan du tar in radion för reparation. Om du inte kan lösa problemet med hjälp av följande tips kan du därför tala till butiken eller serviceverkstan.

WARNING: Försök under inga omständigheter att reparera radion själv. Då förlorar garantin sin giltighet.

Denna produkt uppfyller kraven i EU:s avstörningdirektiv. Typplatten och tillverkningsnumret finns inuti batterifacket.

STRÖMMATNING FRÅN NÄTET

Batterier (ingår inte)

- 1 Öppna batteriluckan och lägg i fyra batterier (helst PHILIPS POWER LIFE eller alkalisika*), typ R6, UM3 eller AA, se anvisningar i batterifacket.
- 2 Ta ut batterierna ur radion när de är uttjänta eller inte ska användas på en tid.
- 3 **ALARM MODE/OFF** - för att koppla på/väckning med signal, radio eller båda
- 4 **WEEKENDSLEEPER Z MODE/OFF** - för att ställa in sovomrorg under veckoslutet
- 5 **ALARM/TIME/DAY SET**
 - för att ställa in tiden för väckning med signal
 - för att ställa in tiden för väckning med radio
 - för att ställa klockan
 - för att ställa in veckodag
- 6 **UP ↑ DOWN ↓**
 - för att ändra bärar tiden och minuterna för klockan/väckning
 - för att välja veckodag
 - för att välja väckningsläge
 - för att välja dagar för sovomrorg
- 7 **Utag för nätadapter AC/DC 7.5 V**
- 8 **Batterifack**
- 9 **REPEAT ALARM**
- för att koppla av väckningen i 5 minuter
 - för att koppla på/av teckennutans bakkelysning
 - för att stänga av insomningsläge

10 **ALARM/TIME/DAY SET**

- ajan astetus merkkiäinen antennaa herästyttä varten;

- ajan astetus radion antennaa herästyttä varten;

- kelloajan astetus;

- päivän astetus.

11 **UP ↑ DOWN ↓**

- sekuri tunti ett minuuttiai säästä kello/herästykoja varten;

- viikonpäivän valinta

- herästykkien valinta

- herästykkien keskeytys viikonlopuksi

12 **Litit AJ/DC 7.5 V** - sovitinta varten

13 **Paristoloker**

14 **REPEAT ALARM**

- herästykkien katkuais 5 minuutin ajaksi

- näytön taustavelun kytkentä

- tarkkuuden katkuais

15 **24 tunnit ALARM RESET** - automaattinen uudelleenasetus antamaan herästykkien antennaa

- ajan astetus antennan palautuminen kateeksi 3 minuutti

- näytön taustavelun palautuminen

16 **RESET** - kelloen datan nollaus

17 **Batterierna i väckningsläge** (Vid användning av PHILIPS POWER LIFE eller alkalisika batterier)

*Total batteritid = minst 9 minuter.

*nya batterier = 3 månader vid 15 minuters radio och 2 minuters väckning med signal

*Vid batteriparallellspänning = 6 månader vid 2 minuters energisänk väckning om dagen.

18 **Batterierens inloggning** (Vid användning av PHILIPS POWER LIFE eller alkalisika batterier)

*Total batteritid = minst 9 minuter.

*nya batterier = 3 månader vid 15 minuters radio och 2 minuters väckning med signal

*Vid batteriparallellspänning = 6 månader vid 2 minuters energisänk väckning om dagen.

19 **Utag för nätadapter AC/DC 7.5 V**

20 **Batterifack**

21 **REPEAT ALARM**

- för att koppla av väckningen i 5 minuter

- för att koppla på/av teckennutans bakkelysning

- för att stänga av insomningsläge

22 **ALARM/TIME/DAY SET**

- ajan astetus merkkiäinen antennaa herästyttä varten;

- ajan astetus radion antennaa herästyttä varten;

- kelloajan astetus;

- päivän astetus.

23 **UP ↑ DOWN ↓**

- sekuri tunti ett minuuttiai säästä kello/herästykoja varten;

- viikonpäivän valinta

- herästykkien valinta

- herästykkien keskeytys viikonlopuksi

24 **2 tunnit ALARM RESET** - automaattinen uudelleenasetus antamaan herästykkien antennaa

- ajan astetus antennan palautuminen kateeksi 3 minuutti

- näytön taustavelun palautuminen

25 **RESET** - kelloen datan nollaus

26 **Batterierna i väckningsläge** (Vid användning av PHILIPS POWER LIFE eller alkalisika batterier)

*Total batteritid = minst 9 minuter.

*nya batterier = 3 månader vid 15 minuters radio och 2 minuters väckning med signal

*Vid batteriparallellspänning = 6 månader vid 2 minuters energisänk väckning om dagen.

27 **Utag för nätadapter AC/DC 7.5 V**

28 **Batterifack**

29 **REPEAT ALARM**

- för att koppla av väckningen i 5 minuter

- för att koppla på/av teckennutans bakkelysning

- för att stänga av insomningsläge

30 **ALARM/TIME/DAY SET**

- ajan astetus merkkiäinen antennaa herästyttä varten;

- ajan astetus radion antennaa herästyttä varten;

- kelloajan astetus;

- päivän astetus.

31 **UP ↑ DOWN ↓**

- sekuri tunti ett minuuttiai säästä kello/herästykoja varten;

- viikonpäivän